

#### ZN1A-4D6DTMZ67

#### 20MP 360° Surround View IP Camera with Video Analytics

#### Quick Manual

G Ver. 1.0 / 2021.06

Before installing and using the camera, please read this manual carefully. Be sure to keep it handy for future reference.

#### ganzsecurity.com

# F©CE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the userwill be required to correct the interference at his own expense.

To disconnect power from the mains, pull out the mains cord plug. When install the product, ensure that the plug is easily accessible.

# Safety Information

#### These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss. If the product is not functioning properly or damaged, contact the service center or purchasing office. WARNINGS : Serious injury or death may be caused CAUTIONS : Injury or equipment damage may be caused 4 if any of these warnings are neglected. if any of these cautions are eglected. POWER POWER Use only standardized adapters written in the manual. Incorrect connection of the Use the power line after fixing it firmly to the power connection terminal. 1. 1. power source can cause fire, electric shock, or failure. Incomplete connection can cause a fire. If there is smoke or a strange smell from the power source, disconnect the power Do not extend the adapter output cable. If you need to install the power cable 2. 2. immediately and contact the service center or purchasing office. If you continue to extension, please contact the service center.

use it as it is, it can cause fire and electric shock. 3. Disconnect the power plug from the outlet before connecting to the power terminal block.

#### INSTALLATION

3.

- 1. Install it according to the temperature and humidity environment suitable for the product specifications. Otherwise, it can cause fire and electric shock.
- 2. Thunder and lightning can cause problems with the camera. When installing, be careful to minimize damage caused by lightning such as grounding.
- Do not place conductive materials (drivers, coins, metal sticks, etc.) and water-filled containers on the camera. It causes injuries caused by fire, electric shock, and falling.
- If you want to move the installed product, turn off the power and move it or reinstall it. Otherwise, it can cause fire and electric shock.
- 5. Do not install it in places where there is a lot of moisture, dust, soot, etc. It causes fire and electric shock.
- Avoid places where direct sunlight comes in or where heat comes out, such as heating appliances. It causes fire and electric shock.

#### CLEANING

 Do not spray water directly on each part of the product when cleaning. It causes fire and electric shock. Use insulated power for PoE connected external power.


#### INSTALLATION


- It is recommended not to touch the lens when installing the product as the factory ships with a focus adjustment completed during the manufacturing completion inspection phase.
- Avoid installing cameras facing bright lights like sunlight. Causes damage to the image sensor.
- Make sure it safe and securely when installing camera on the wall or ceilling. This can cause injury by the fall.
- Do not connect multiple cameras to one adapter. Excess capacity causes abnormal heat and fire.
- 5. Wear protective gloves when installing/uninstalling the camera. This causes burns caused by high temperature on the surface of the product.
- Don't drop or shock the product. Please stay away from places where vibration is severe or magnet types are present.
- 7. Install it in a well-ventilated place. This can cause fire and failure.

#### CLEANING

1. Wipe the contaminated surface with a clean, soft, dry cloth or wet the soft, dry cloth to prevent water from flowing, then wipe the contaminated area.

## 1. Product & Accessories

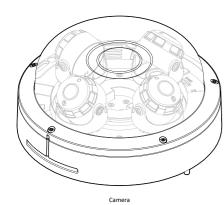


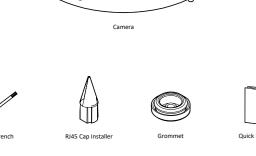

int Screw - 2pc



## 2. Part Name

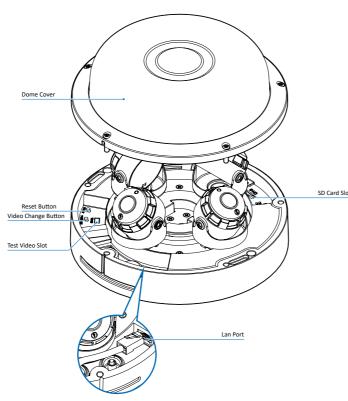

## 3. Disassemble the Camera

TT 6

Reset Butto

#### Before installing your camera, you have to read the following cautions.

You have to check whether the location can bear five times of the weight of your camera.
 Don't let the cable to be caught in improper place or the electric line cover to be damaged.

- Otherwise it may cause a breakdown or fire. 3. When installing your camera, don't allow any person to approach the installation site.
- If you have any valuable things under the place, move them away.
  - Connect the safety hook to the screw on the bottom case and dome cover with the wire.



Reset to the Factory Default Press the reset button for 5 seconds to return the setup to the factory default.

#### 🔯 Warning :

If you press the 'Reset' button, you will lose all setting data. If needed, please, make a note for further installation.

#### 🐹 Desi-Pak (Moisture Absorber)

When installing, unseal the vacuumpacked Desi-Pak and install it in the marked position. When inserting or removing Desi-Pak, be careful as it may be torn if you use a pointed tool.

#### Test Video Slot

When you connect the Test Monitor Cable to the Test Video Slot, the screen of CAM1 appears. Each time you press Video Change Button, the screen changes in order of CAM1, CAM2, CAM3, and CAM4.


SD Card Slot


# Installation and Use Precautions

- The battery (battery pack or equipped battery) must not be exposed to excessive heat such as sunlight, fire, etc.
- 2. Do not disassemble the camera at your discretion.
- If you forcefully install the product with excessive force, malfunction can damage the camera.
- 4. Do not punch or shake the camera and be careful not to damage the camera with careless storage or malfunction.
- Be careful not to install the camera in a rainy or humid place, and do not leave it in a wet place.
- 6. Installing or using the product in water can cause serious product failure.
- 7. Do not install the product if there is chemical or vapor in the place where the product is installed, or if it can be generated.
- Be careful not to get chemicals on the surface of the product when installing the product. Chemical solvents such as cleaning agents and adhesive components can cause fatal damage to the surface of the product.
- Do not install it near the kitchen or cooking table as edible oil such as soybean oil can also cause product damage and deformation. It can cause product damage.
- Be careful not to get foreign substances on the Micro SD card terminal. If there is any foreign substance, wipe it with a soft cloth.
- 11. Data will not be saved at the end of the life of the Micro SD card. In this case, purchase a new Micro SD card.
- 12. Moisture may occur in the glass of the camera when the new product box is opened (or when the product is initially running). The generated moisture is removed by a Gore vent attached to the camera within hours of the power connection.
- For products enclosed with a desiccant or card-type absorbent, please install it according to the manual.
- 14. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
- Unplug this apparatus when a cart is used. Use caution when moving the cart/apparatus combination to avoid injury from tip-over.



# 4. Installation

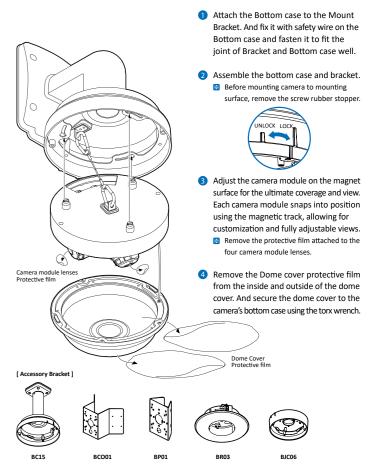

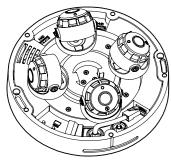



# 

2 Installation Method 2

How to connect the Network Cable

network cable.

1 Installation Method 1

Refer to the picture below and connect the

 Insert the RJ-45 cap Installer into the Lan cable.
 Remove the Grommet blocking the bottom hole of the camera.

 Pass LAN cable with cap installer through the hole of GROMMET from bottom to top.
 Pay attention to the direction of the Grommet




5. Remove the RJ-45 cap Installer before connecting the LAN cable to the camera.

 Connect the Lan Cable to the camera.
 After completing the cable installation, insert Grommet into the bottom case.

Benting the cable can cause water leakage.

# Preparing to Mount the Camera

- 1. The mounting surface must bear fice times the weight of your camera.
- 2. Do not let the cables get caught in improper places or the electric line cover to be damaged. This may cause a breakdown or fire.
- CAUTION : These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- 4. This product is intended to be supplied by a UL Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated 12 Vdc, 2.5A min.
- The wired LAN hub providing power over the Ethernet (PoE) in accordance with IEEE 802.3bt shall be a UL Listed device with the output evaluated as a Limited Power Source as defined in UL60950-1 or PS2 as defined in UL62368-1.
- Unit is intended for installation in a Network Environment 0 as defined in IEC TR 62102. As such, associated Ethernet wiring shall be limited to inside the building.
- 7. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.

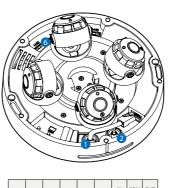



#### Network Connection

Connect the Straight through or crossover cable.

Benting the cable can cause water leakage.

Lan Cable thickness Ø5.0 ~ Ø8.0mm.

I/O Cable Connection

#### 3 Power

 Please check the correct rated power.

 Rate Power
 Power Consumption
 PoE

 DC 12V
 DC12V: 28W / PoE: 31W
 IEEE 802.3bt class5

### **Disposal of Old Appliance**



- The symbol marked in the product, will follow and covered by the Europe Directive 2002/95/EC.
- 2. All electornic disposal of waste is differenct by the government or locally, so so it need to check.

**4** Sensor/Alarm Input (DI)

Terminal Block.

6 Audio In

be used

Audio Out

speaker.

6 SD Card Slot

Cable of the sensor/alarm input device

It connects to the alarm lights, siren or

lamps and the sensor types are normal

Connect the 'Audio In' port of the

'Line Out'port of the amplifier

connected with microphone.

camera to the microphone directly or

If the microphone is connected directly,

the microphone with the embedded

Connect the 'Audio Out' port of the

camera to the 'Line In' port of the

If the speaker without the amplifier is

with the amplifier or the separate

Audio Out supports only RTSP Back

available on the web later.

channel function. It plans to make it

amplifier is needed.

connected to Audio Out port, it doesn't

work properly. Therefore, the speaker

amplifier such as condenser mic. needs to

should connect to + and - of the

Alarm Out/Relay Out (DO)

open and normal close.

- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## 6. IP Installer

# Run IP Installer Run the IP installer.

- 2 Click on Network Adaptor selection Menu (NIC) after run this program.
- 3 Select a network which a camera is connected then click on a 'Gaarch'
- connected then click on a 'Search' button. (Takes about 5 sec.)
- 4 Select a camera to set.
- 5 The information of the selected camera will be shown at Device Info.

#### 6 Select the network type.

- The default network type of the camera is STATIC.
   When set to DHCP, if you have a DHCP server, it will automatically set the
- Camera IP. When set to DHCP, if you have do not
- have a DHCP server, Camera IP is set to 192.168.xxx.xxx after one minute.

